


## 2.6.3 TV Channel

6 5-EUR100-E218

### 3.1 Channel User Interface

Press "Menu" → "Down (▼)" → "Down (▼)" → "Right (▶)" to enter channel operation user interface in ATV/DTV/Radio Source as follows:

WBP-EZS1311-033

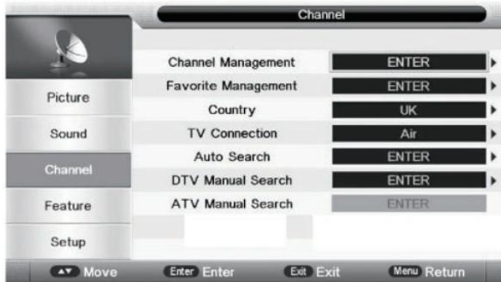

CPU

MANTA

9

202-R1(EU)

There are following functions in this page:

Channel Management: To manage (Delete//Swap/Lock/Skip) all channels;

Favorite Management: To manage (Add/Delete) Favorite channels;

Country: To select country.

TV connection : To select the DTV signal mode(Air/Cable/Satellite)

Auto Search: To select auto search mode (DTV/ATV)

DTV Manual Search: To search digital channel by entering parameters manually(only forDTV)

ATV Manual Search: To search analogue channel by entering parameters manually(only for ATV);

### 3.2 Function Description

#### 3.2.1 Channel Manager

Press "ENTER" or "RIGHT" key on "Channel management" of "Channel" page in ATV or DTV source. The operation interface shows as follow:




LED3202

User's Manual

# LD COLOR TV

## 3.2.1.1 Delet/Skip/Lock Channel

1) Press “UP (▲)” and “DOWN (▼)” key to select the programs to be deleted and press “RED”, “GREEN” or “YELLOW” key to mark them as following:

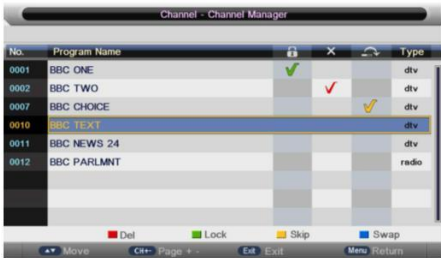

2) After marking press “MENU” key to save the result.

## 3.2.1.2 Swap Channel

Select the program to be swapped and press “BLUE” key, the selected program will wink and then select another program and press “BLUE” key to swap them.

## 3.2.2 Favorite Management

1) Press “ENTER” or “RIGHT” key on “Favorite management” of “Channel” page in ATV or DTV source. The operation interface shows as follow:



2) Press “UP (▲)” and “DOWN (▼)” key to select the programs to be added into favorite list and press “RED”, “GREEN”, “YELLOW” or “BLUE” key to mark them as following:



3) Press “MENU” key to return “Favorite management” page and save the result.

# LD COLOR TV

## 3.2.3Country



1) Select the country.

## 3.2.4Auto Search

### 3.2.4.1 Air signal mode

Select "Auto Search" item to enter auto search user operation interface as following:



**All Mode:** Select "All" item to scan all digital channels carried by current signal mode firstly and then switch to scan all analog channels in selected country automatically. User can skip digital search to analog search directly by entering "EXIT" or "MENU" key and can also stop auto scan directly by entering "EXIT" or "MENU" during analog scanning.

**Digital Mode:** Select "Digital" item to search all digital channels in selected country carried by current signal mode. User can stop search directly by entering "EXIT" or "MENU" key.

**Analog Mode:** Select "Analogue" item to search all analogue channels in selected country carried by current signal mode. User can stop search directly by entering "EXIT" or "MENU" key.

All search mode processing interface display as following:



# LD COLOR TV

## 3.2.5 Digital Manual Search

### 3.2.5.1 Air signal mode

Select "Digital Manual Search" item to enter air channel manual search in DTV source and the user operation interface as following:



Select channel number by "RIGHT" key or entering number directly. The strength and the quality shows at the bottom. Press "ENTER" key on "Start" item to start current channel search. The manual searching UI and the auto searching UI are the same.

## 3.2.6 Analog Manual Search

Select "Analogue Manual Search" item to enter analogue manual search in ATV source and the user operation interface as following:



These parameters in this page show as the following table:

Analog Parameters	Value	Default
Current Channel	001-100	001
Frequency	Show the Frequency when srech	Frequency of the current channel
Search	Press the button "enter" to open the search sub page.	
Fine Tune	Press the button "enter" to open the fine tune sub page.	
Color System	Auto/PAL/SECAM	Color System of the current channel
Sound System	BG/DK/I/L/L'	Sound System of the current channel

# LD COLOR TV

Enter these parameters and then select “Search” item to enter analog channel tune. A dialog popup on left bottom:



Press “Left (◀)” to search channel carried in lower frequency and “Right (▶)” key to search channel carried in higher frequency. Press “MENU” key to return to “Channel-Analogue Manual Search” page and press “RED” key to save the scanned channel to database.

User also can select “Fine Tune” item to fine tune current channel and the UI shows as the last picture. Press “Left (◀)”, “Right (▶)” key to fine tune current channel. Press “MENU” key to return to “Channel-Analogue Manual Search” page and press “RED” key to save the tuned channel to database.



Operations in Feature Menu are shown in the following table:

Key Stroke	Action
KEY_UP	Highlight the previous sub item. If it is the first button currently, then highlight the last one in the list.
KEY_DOWN	Highlight the next sub item. If it is the last button in the list currently, then highlight the first one.
KEY_LEFT	Back to mainmenu
KEY_RIGHT	If the focused item is “Timer”, mainmenu will be closed firstly and then open the Timer Menu; If the focused item is “ CI Info”, mainmenu will be closed firstly and then open the CI Info Menu; If the focused item is “ Hearing Impaired”, a Popup Menu will be opened ; If not, Feature Menu will be closed firstly and then open the corresponding sub menus.
KEY_ENTER	Same as KEY_RIGHT.
KEY_MENU	Back to Main Menu.
KEY_EXIT	Exit Main Menu.

 **MANTA**



Assembled in Poland